### EN

# **INSTALLATION MANUAL**

roller system, key switch, remote control and finishing



EN

# YOUR SKILLS & OUR TOOLS

Poolmotive® strives to strengthen the swimming pool industry. By standing together and supporting people in the market, and by improving products.

Our reason for innovating is to make things better, to improve on what came before. We work together with swimming pool builders, adapting products to needs and learning and growing by listening to our clients.

As a manufacturer and innovator, Poolmotive knows what it means to build a really good and sustainable swimming pool. And what is needed to maintain it smartly and effectively. It requires knowledge, deep professional knowledge and sometimes that can be underestimated, but not by us.


It is our responsibility to support you as a professional in this beautiful industry. That starts with understanding and communication, by thinking smartly together about products, to make them better. A well-thought-out installation is the start of a better product. Our innovative products should help you deliver a better, more sustainable and more beautiful swimming pool.




### INHOUD

EN

TIPS & TRICKS		3
CONCRETE POOL	<ul> <li>pre-assembly</li> <li>mounting kit</li> <li>create a water lock</li> <li>install roller tube with motor</li> <li>fix the roller tube with motor</li> </ul>	4 5 6 7 8
BRICKED POOL	<ul> <li>pre-assembly</li> <li>mounting kit</li> <li>create a water lock</li> <li>install roller tube with motor</li> <li>fix the roller tube with motor</li> </ul>	9 10 11 12 13
POLYSTYRENE BLOCK POOL	<ul> <li>pre-assembly</li> <li>mounting kit</li> <li>create a water lock</li> <li>install roller tube with motor</li> <li>fix the roller tube with motor</li> </ul>	14 15 16 17 18
PREFAB POOL	<ul> <li>mounting kit</li> <li>create a water lock</li> <li>install roller tube with motor</li> <li>fix the roller tube with motor</li> </ul>	19 20 21 22
CONNECTING CONTROL BOX		23
CONNECTING KEY SWITCH		24
CONNECTING 2 CHANNEL REMOTE CONTROL		
CONNECTING 4 CHANNEL REMOTE CONTROL		
PROGRAMMING END POSITIONS		27
ERROR MESSAGES		28
BENCH COVER PANEL 750 X 750 MM	- pre-assembly - assembly	29 30
VERTICAL CAVE PANEL 750 MM VERTICAL CAVE PANEL 1000MM VERTICAL CAVE PANEL 750/1000 MM	<ul> <li>pre-assembly</li> <li>pre-assembly</li> <li>assembly</li> </ul>	31 32 33
HORIZONTAL PANEL	- pre-assembly - assembly	34 35

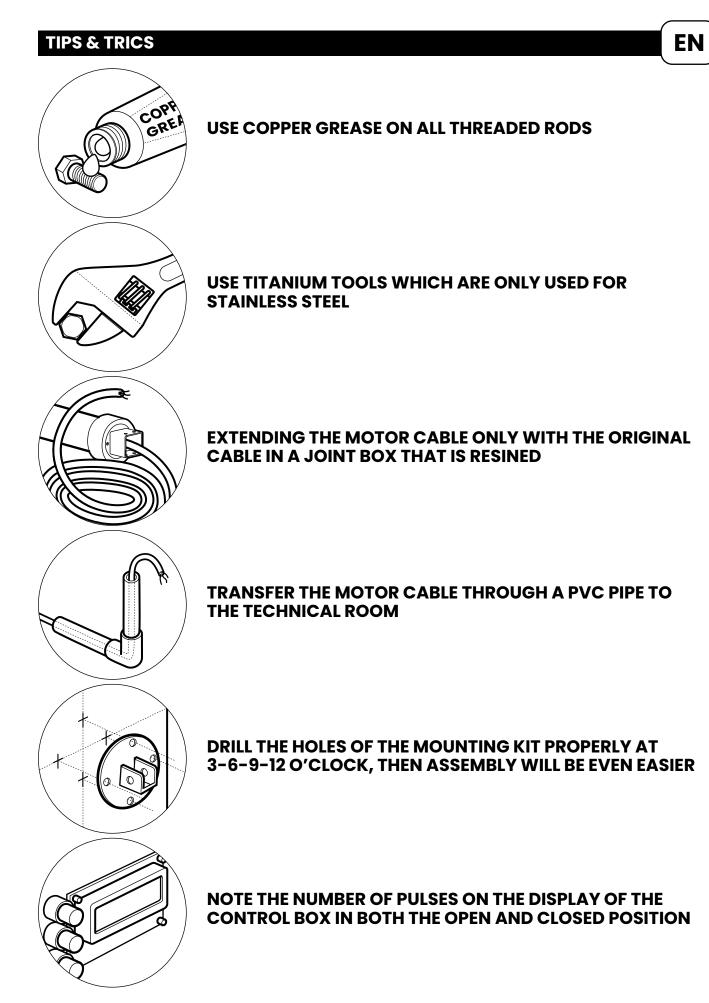

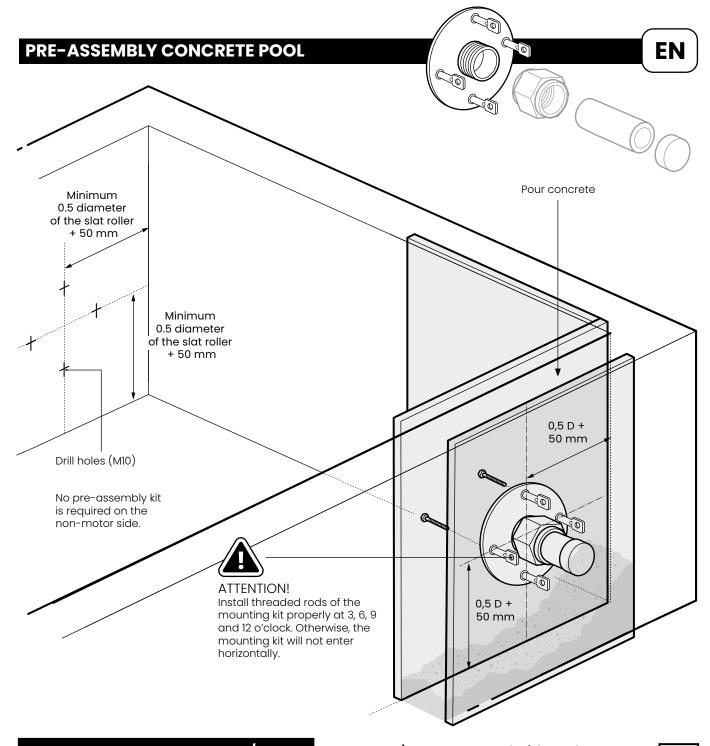


Roll diameter	<b>250 Nm</b> (ø 140mm)	<b>450/600 Nm</b> (ø 170mm)		Length of the pool (see table for roll diameter)	
Pool length	Diameter (D) slat roller	Diameter (D) slat roller			
4 meters	354mm	367mm	J		
5 meters	390mm	402mm	······································	Ĺ	
6 meters	422mm	433mm	l l l l l l l l l l l l l l l l l l l		t
7 meters	453mm	463mm			
8 meters	481mm	491mm			
9 meters	508mm	517mm			
10 meters	533mm	542mm			
11 meters	558mm	566mm	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		
12 meters	581mm	589mm	l X		
13 meters	603mm	611mm		0.5 D of the	, min.
14 meters	625mm	632mm			60 mm
15 meters	646mm	653mm		50 mm + D	

These dimensions apply to a slat height of 16 mm.

### **MOUNTING KIT CONCRETE POOL**




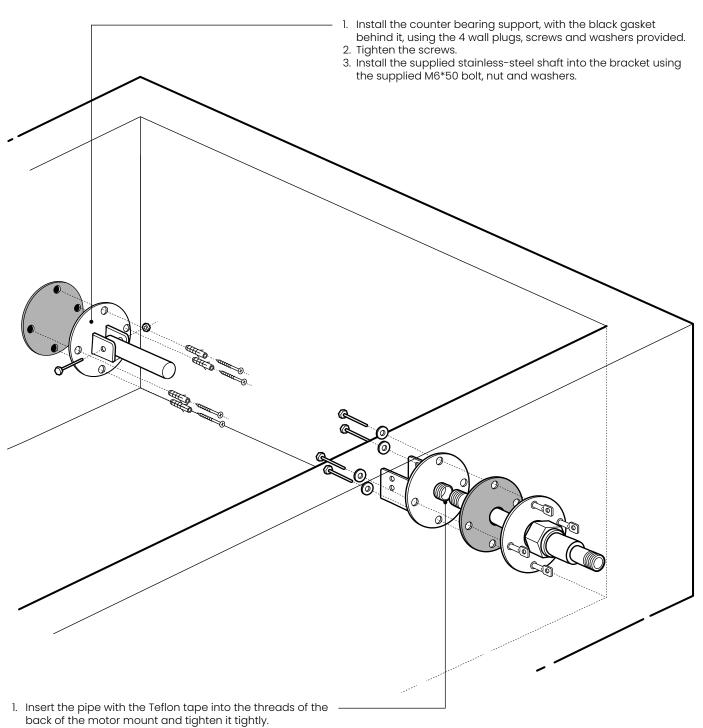

- 2. Install the motor mount, with the black gasket behind it, using the 4 bolts and washers provided.
- 3. Tighten the bolts.


### **CREATE A WATER LOCK**



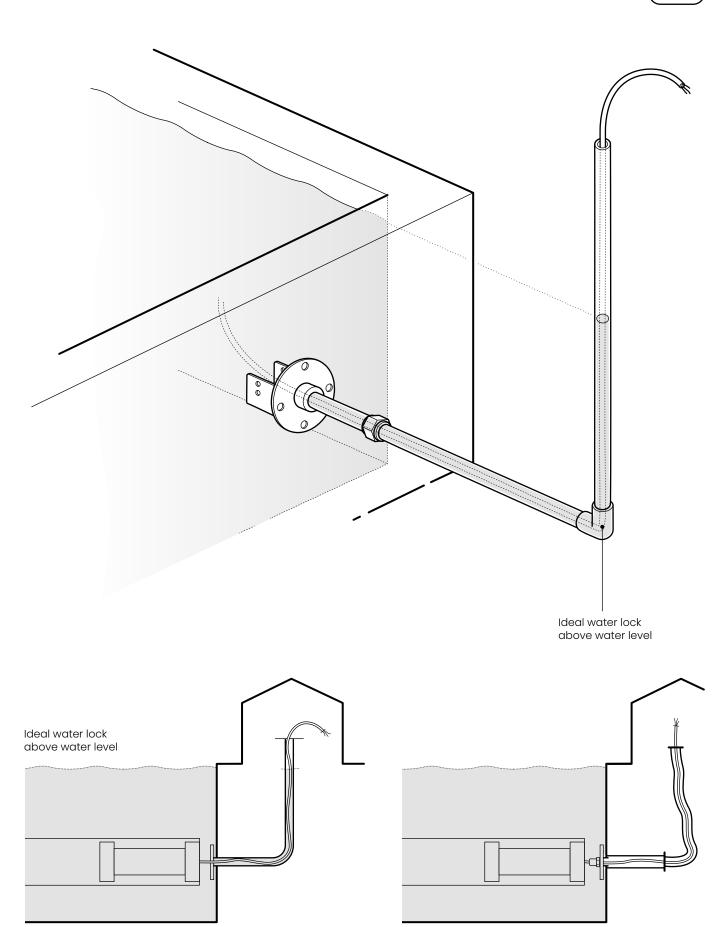

**EN** 

### **INSTALL ROLLER TUBE WITH MOTOR**

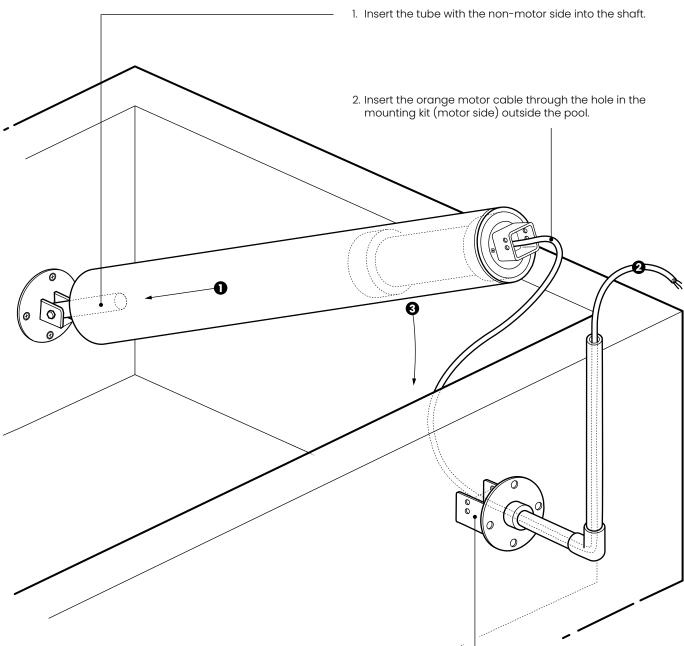


3. Gently lower the axle and place it in the motor support

# FIX THE ROLLER TUBE WITH MOTOR EN 6 0 0 0 $\cap$ $\bigcirc$ Make sure the holes of the motor match the holes in the mounting kit. Insert and tighten the bolt, washers, and nut. -50 000 0 Q 0 6 ATTENTION! Ø With the 450 NM and the 600 NM motor you have to use 2 bolts. F F For the next step go to page 23

### **PRE-ASSEMBLY BRICKED POOL** EN ATTENTION! Install threaded rods of the No pre-assembly mounting kit properly at 3, 6, 9 is required on the Ð and 12 o'clock. Otherwise, the non-motor side. mounting kit will not enter ٩ horizontally. Minimum Thickness of stucco layer 0.5 diameter of the slat roller Pour concrete + 50 mm Minimum Drilling holes (M10) 0.5 diameter of the slat roller Minimum 0.5 diameter + 50 mm of the slat roller + 50 mm Minimum 0.5 diameter of the slat roller + 50 mm

### **MOUNTING KIT BRICKED POOL**




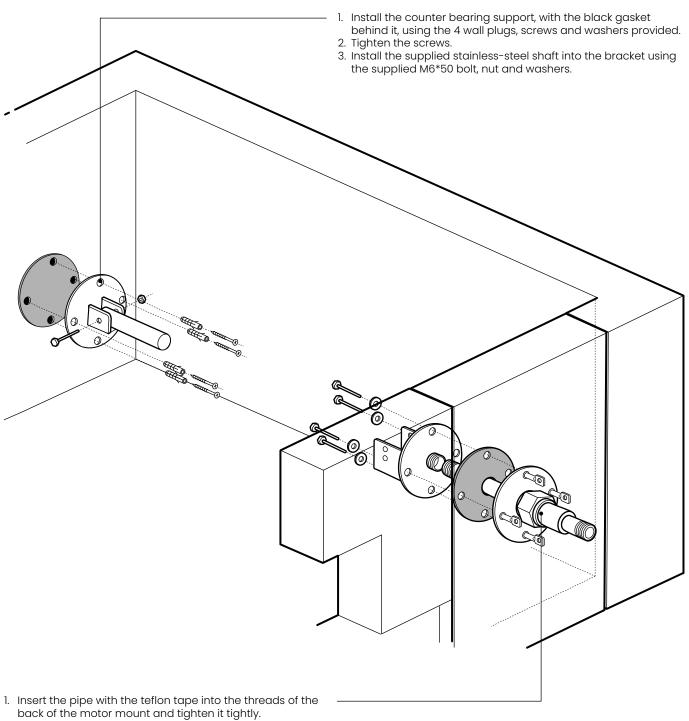

- 2. Install the motor mount, with the black gasket behind it,
- using the 4 bolts and washers provided.
- 3. Tighten the bolts.


### **CREATE A WATER LOCK**



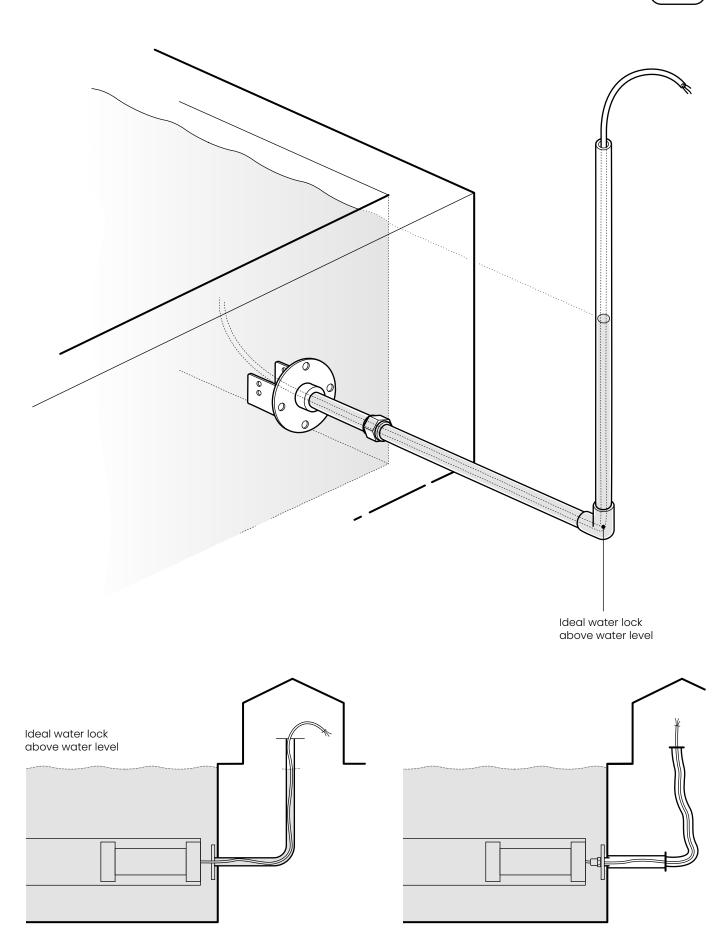


**EN** 

### **INSTALL ROLLER TUBE WITH MOTOR**

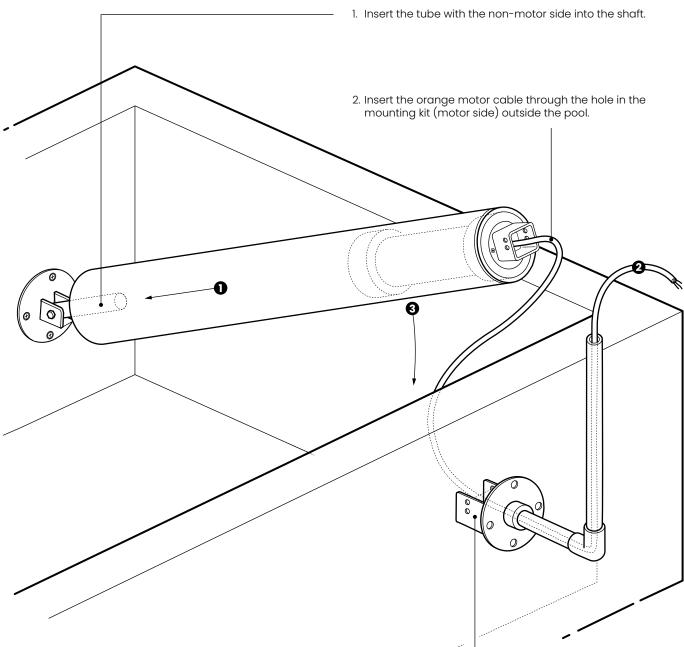


3. Gently lower the axle and place it in the motor support

# EN FIX THE ROLLER TUBE WITH MOTOR 6 0 0 0 $\cap$ $\bigcirc$ Make sure the holes of the motor match the holes in the mounting kit. Insert and tighten the bolt, washers, and nut. -50 000 0 Q O 6 ATTENTION! Ø With the 450 NM and the 600 NM motor you have to use 2 bolts. F F For the next step go to page 23

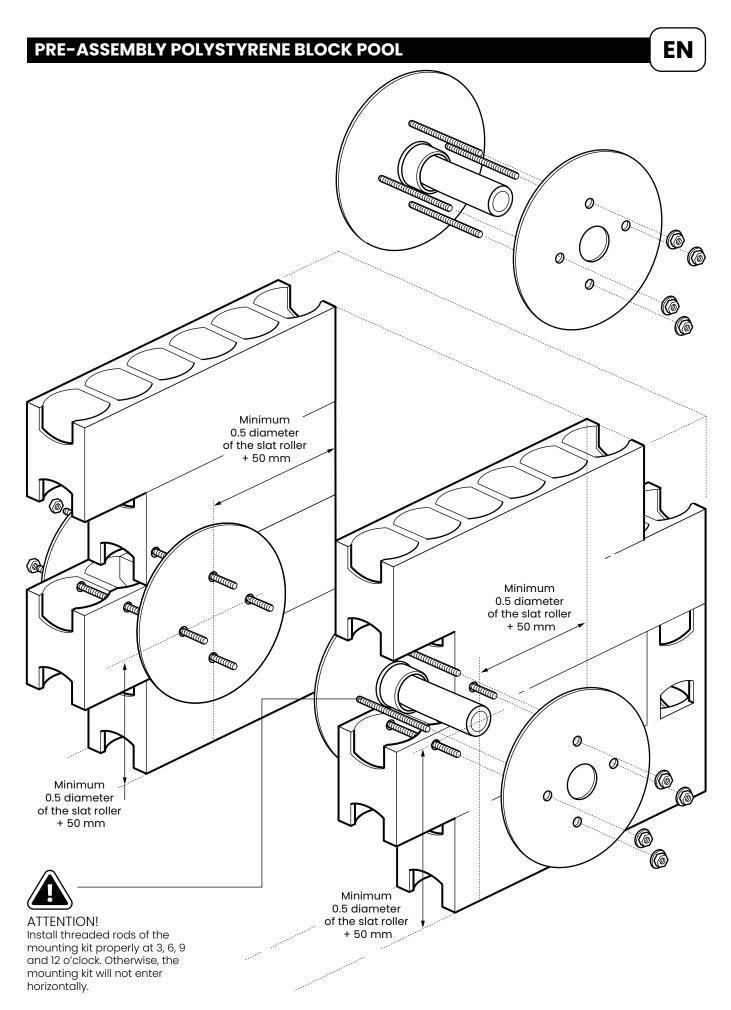

**EN** 


### MOUNTING KIT POLYSTYRENE BLOCK POOL

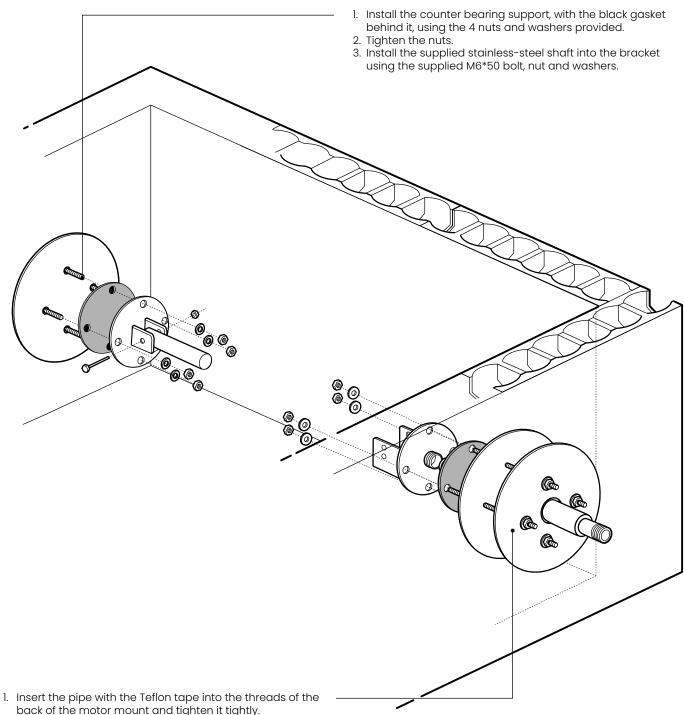

- back of the motor mount and tighten it tightly.Install the motor mount, with the black gasket behind it, using the 4 bolts and washers provided.
- 3. Tighten the bolts.


### **CREATE A WATER LOCK**



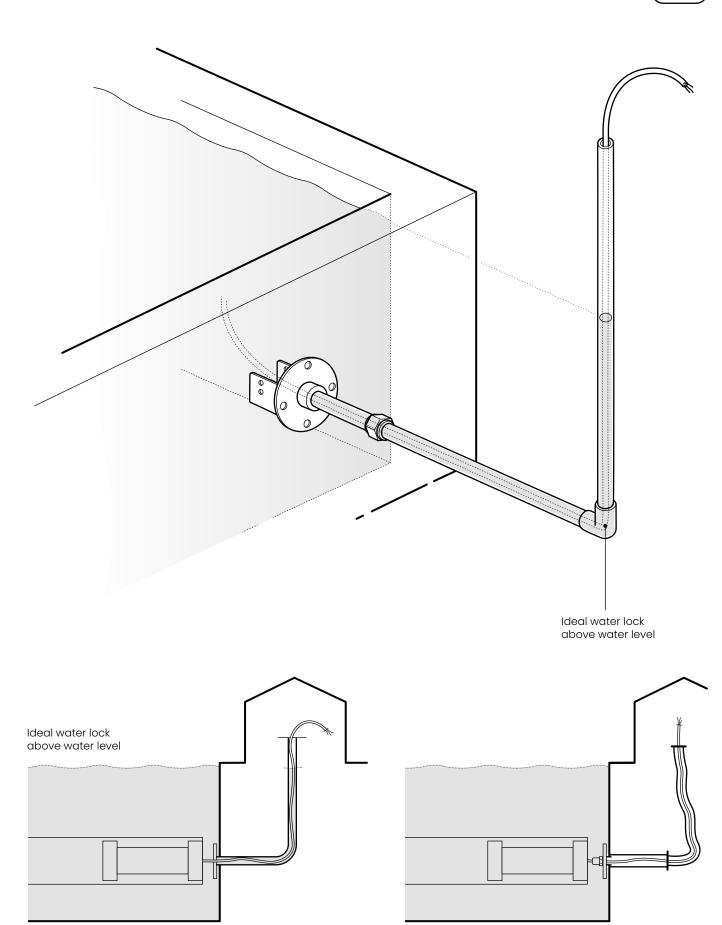


**EN** 

### **INSTALL ROLLER TUBE WITH MOTOR**

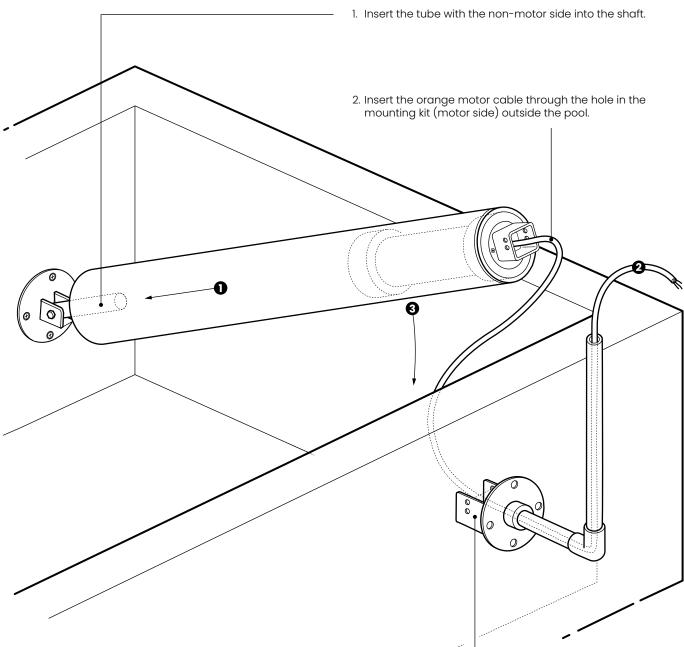



3. Gently lower the axle and place it in the motor support

# EN FIX THE ROLLER TUBE WITH MOTOR 6 0 0 0 $\cap$ $\bigcirc$ Make sure the holes of the motor match the holes in the mounting kit. Insert and tighten the bolt, washers, and nut. -50 000 0 Q O 6 ATTENTION! Ø With the 450 NM and the 600 NM motor you have to use 2 bolts. F F For the next step go to page 23

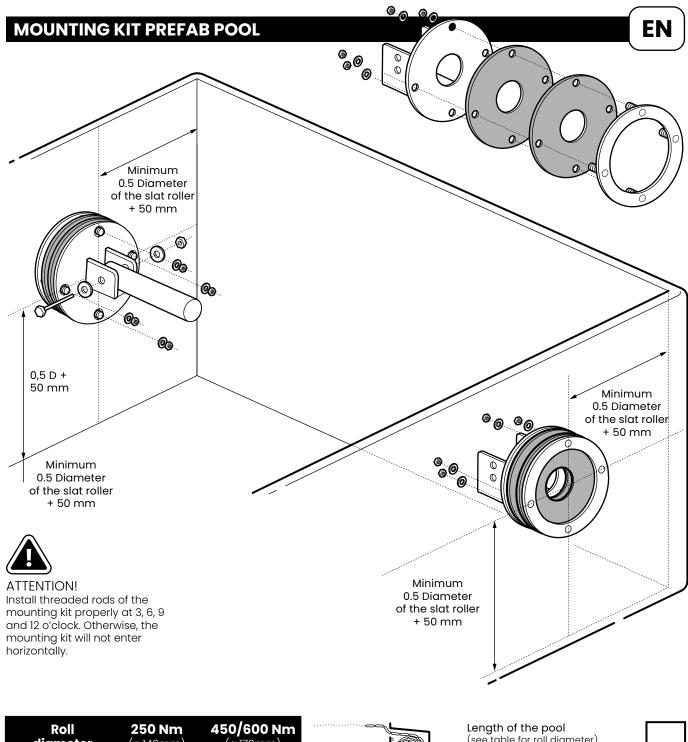

diameter	(ø 140mm)	(ø 170mm)
Pool length	Diameter (D) slat roller	Diameter (D) slat roller
4 meters	354mm	367mm
5 meters	390mm	402mm
6 meters	422mm	433mm
7 meters	453mm	463mm
8 meters	481mm	491mm
9 meters	508mm	517mm
10 meters	533mm	542mm
11 meters	558mm	566mm
12 meters	581mm	589mm
13 meters	603mm	611mm
14 meters	625mm	632mm
15 meters	646mm	653mm

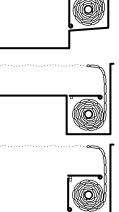


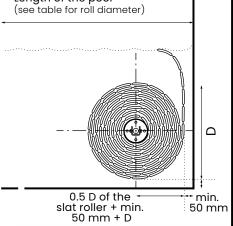


These dimensions apply to a slat height of 16 mm.


### **CREATE A WATER LOCK**



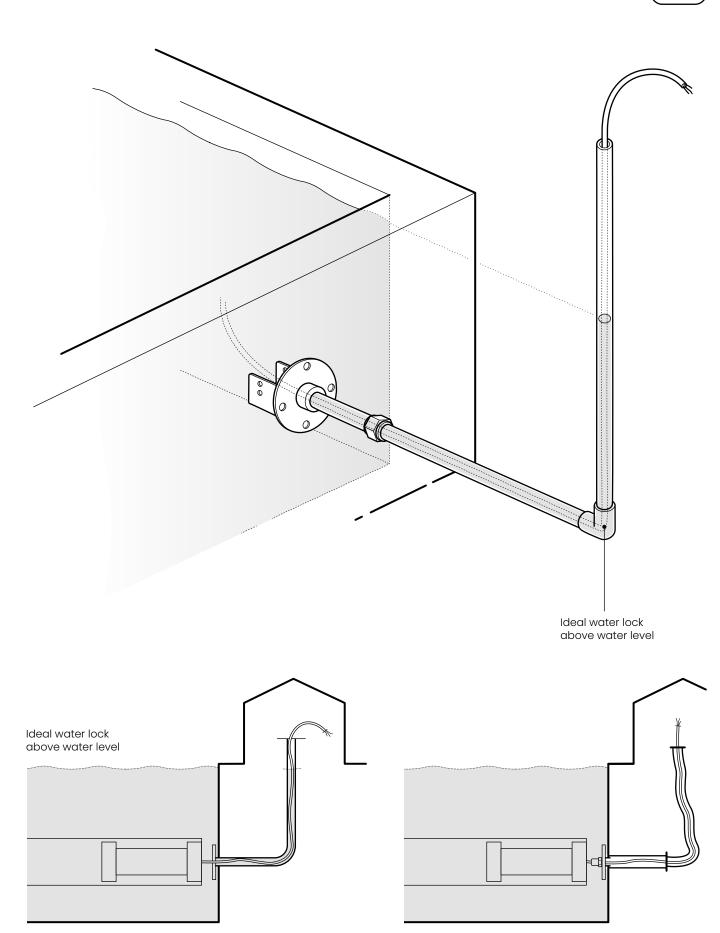

EN

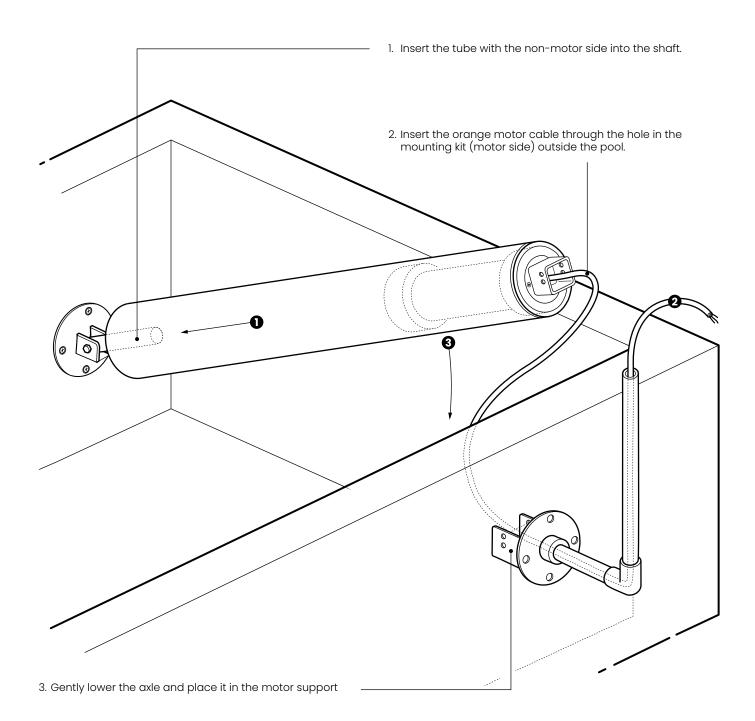

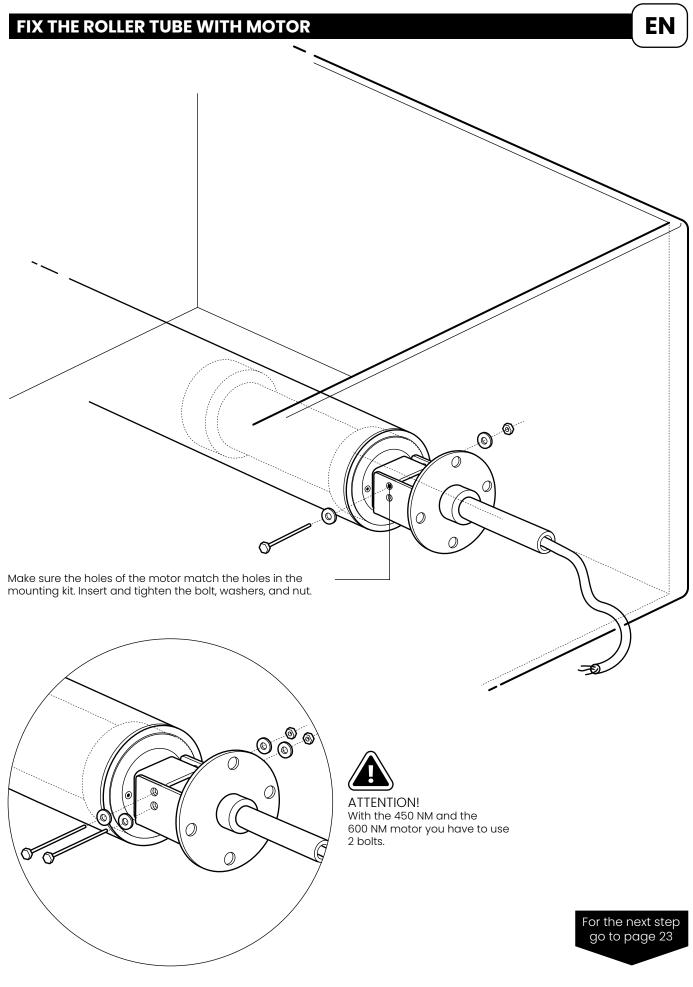


Black

0,5 mm<sup>2</sup>

2

### **CONNECTING CONTROL BOX**


EN

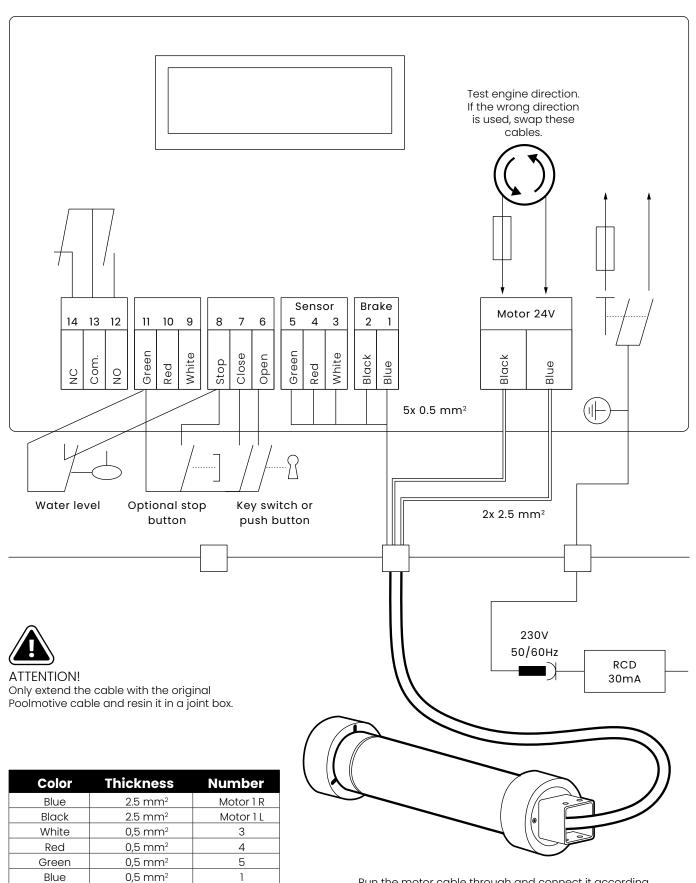

Run the motor cable through and connect it according to the diagram above.

### **CONNECTING KEY SWITCH**


EN

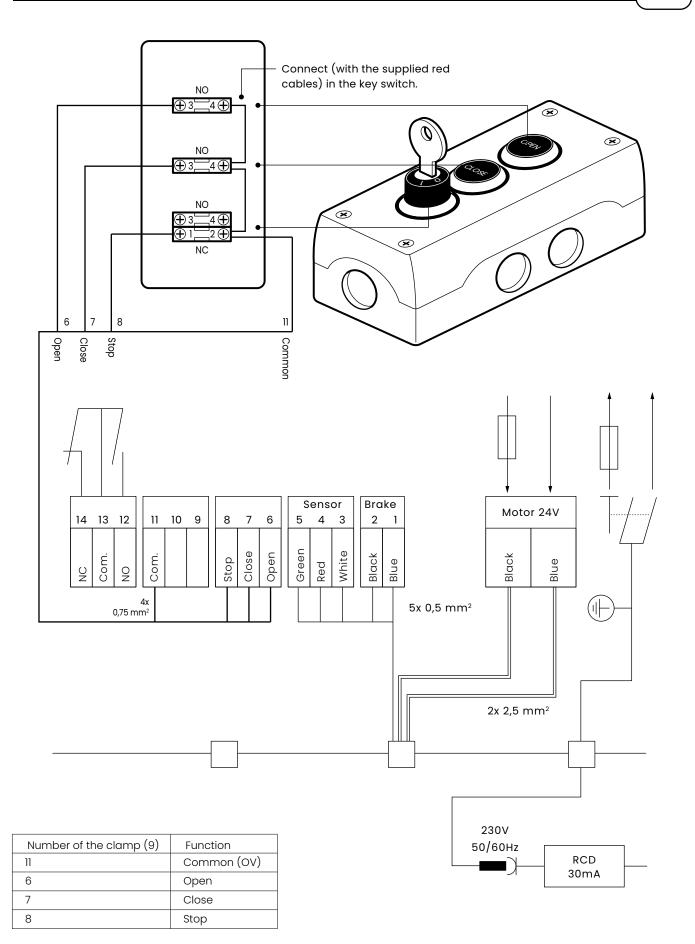


### **CONNECTING 2 CHANNEL REMOTE CONTROL**

EN

Mount the black receiver of the remote control at the top of the control box of the roller system. Bring the 3 cables (blue, grey and purple) down behind the PCB. Keep the 2 cables (red and black) at the top.

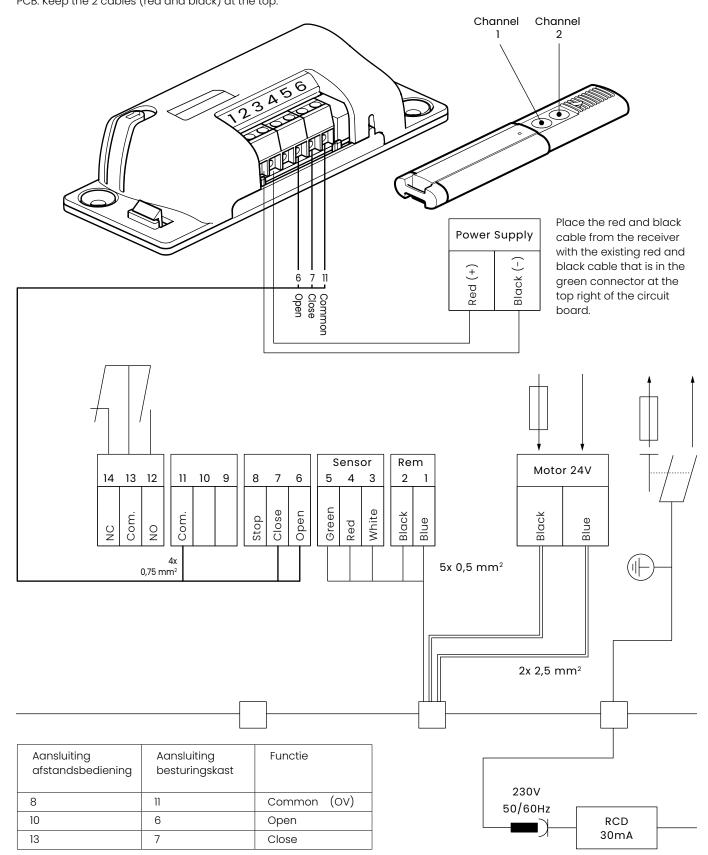

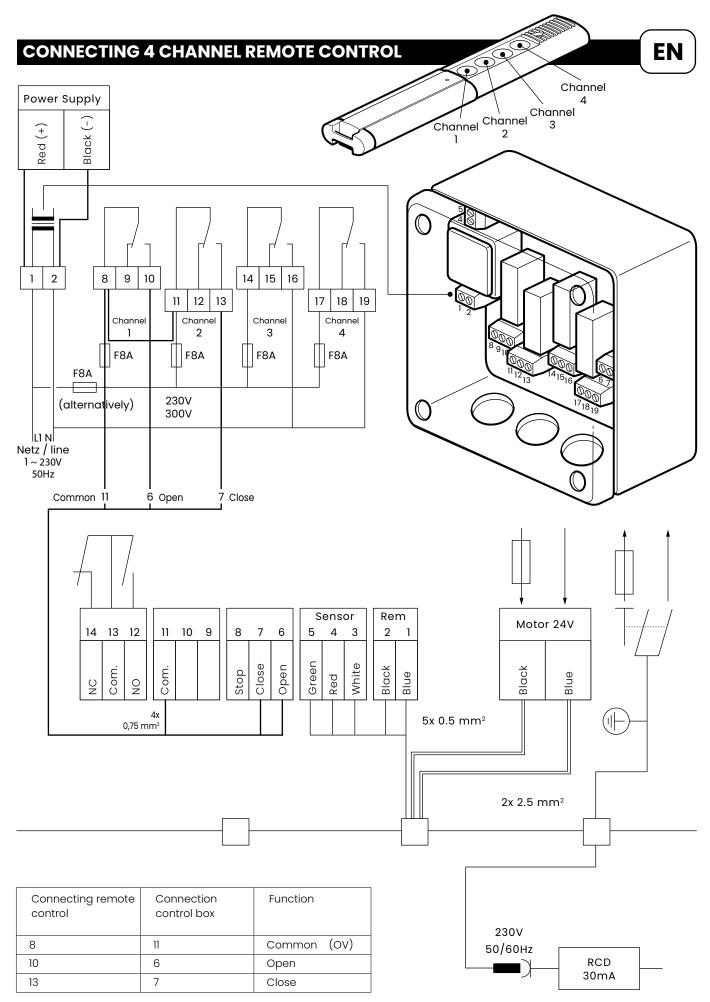

### **PROGRAMMING END POSITIONS**

# EN

#### POSITION OPEN MEANS THAT THE WATER SURFACE OF THE POOL IS TOTALLY VISIBLE AND THE COVER IS COMPLETELY WOUND UP

- 1. Press and hold the red programming button for three seconds until "Programming mode" is shown on the display.
- 2. Press the Open button. The red LED next to the OPEN button lights up.
- a. The red LED next to the red key flashes quickly.
- 3. When the cover reaches the OPEN position, stop the engine by pressing the Close button.
- a. The desired position can be corrected with the buttons in both directions.
- b. A delay of 4 seconds must be taken into account when switching.
- 4. Switch off the voltage with the main switch on the controller. The end position OPEN is programmed.

### **POSITION PROGRAMMING CLOSED**

Position CLOSED means that the water surface of the pool is covered and the cover is completely on the surface of the water.

- 1. Switch on the main switch (1). "Done" will appear on the display.
- 2. Press and hold the red programming button for three seconds until "Programming mode" appears on the display. a. The red LED next to the red key flashes quickly.
- 3. Press the Close button. The red LED next to the CLOSE button lights up.
- 4. When the cover reaches the CLOSED position, stop the engine by pressing the Open button.
- a. The desired position can be corrected with the buttons in both directions.
- b. A delay of 4 seconds must be taken into account when switching.
- 5. Press the red programming button once.
- a. "Position 1" appears on the display, the LED next to the button (5) flashes slowly.
- 6. Press the red programming button (5) again.
- a. "Position 2" appears on the display, the LED next to the button (5) flashes faster.
- 7. Press the red programming button again.
- a. The desired position has been saved.
- b. The message "saved" on the display disappears and the LED next to the red programming button (5) goes out.

EN

### **ERROR MESSAGES**

An error is indicated when the LED's next to the programming buttons. The display will show an error message in accordance with the following table.


#### **IMPORTANT:**

In the event of any malfunction in the system, the following must first be checked:

- 1. Is the plug-in fuse in the control box in order (measuring)?
- 2. Is there a key switch?
  - a. Yes = disconnect it from the control box before searching for the fault
  - b. No = immediately look for the fault
- 3. Is the motor cable extended?
  - a. Yes = remove the connection and connect the control box directly to the motor cable
  - b. No = immediately look for the fault

Led foutcode	Storing op het display	Mogelijke oorzaak	Oplossing
All 3 LED's are flashing.	Key switch block.	Key switch is in the OPEN or CLOSE position.	Turn the key switch to the 0 position. The word "ready" appears in the display.
All 3 LED's are flashing.	Sensor error.	Decoder not functioning.	Have the unit inspected by a professional technician. The drive runs out of control in this instance.
All 3 LED's are flashing.	Maximum current.	Motor is blocked or is rough-running. Items in pool.	Remove the items. Have the unit inspected by a professional technician.
None.	None.	The unit only moves in one direction.	Connect the key switch properly. Connect the cable from terminal 6 to terminal 11, or from terminal 7 to terminal 11.
LED for voltage display is not lit.	No display.	Shock-proof plug has no power. Residual current circuit breaker was activated. Power switch (1) not turned on mains fuse ( ) on the power supply board defective.	Check house fuse, have unit inspected by a professional technician. Turn on power switch, check fuse / replace if needed.

EN

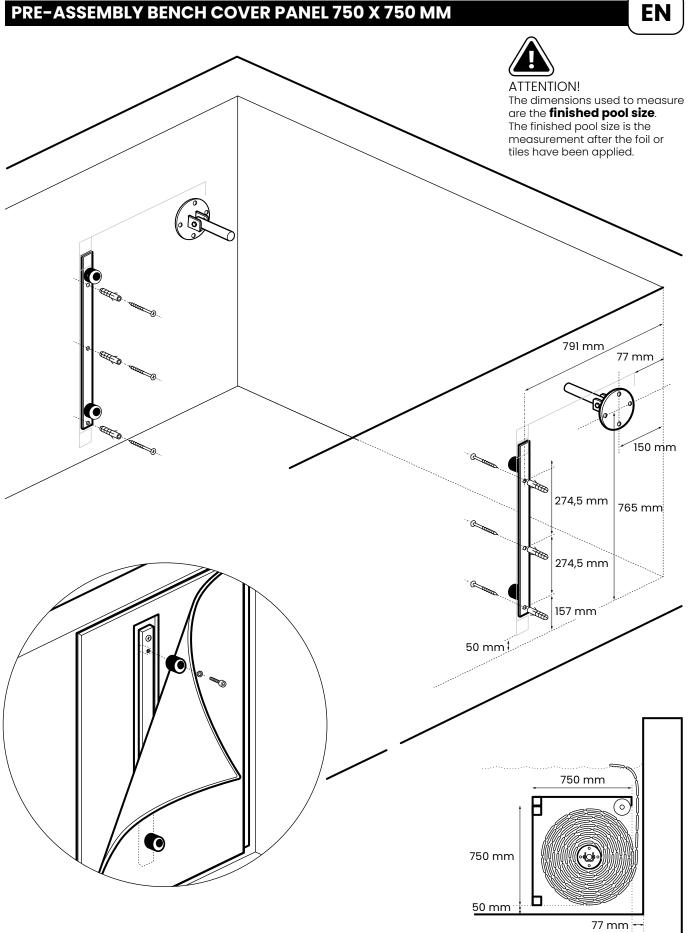


EN

# **ASSEMBLY BENCH COVER PANEL** Closing and tightening the horizontal cover with an Allen key Adjustment ring for horizontal adjustment between the pool walls min 50 mm Eccentric cams for perfect adjustment of the cover/ niche plate First mount at the bottom, then turn upright and attach at the top






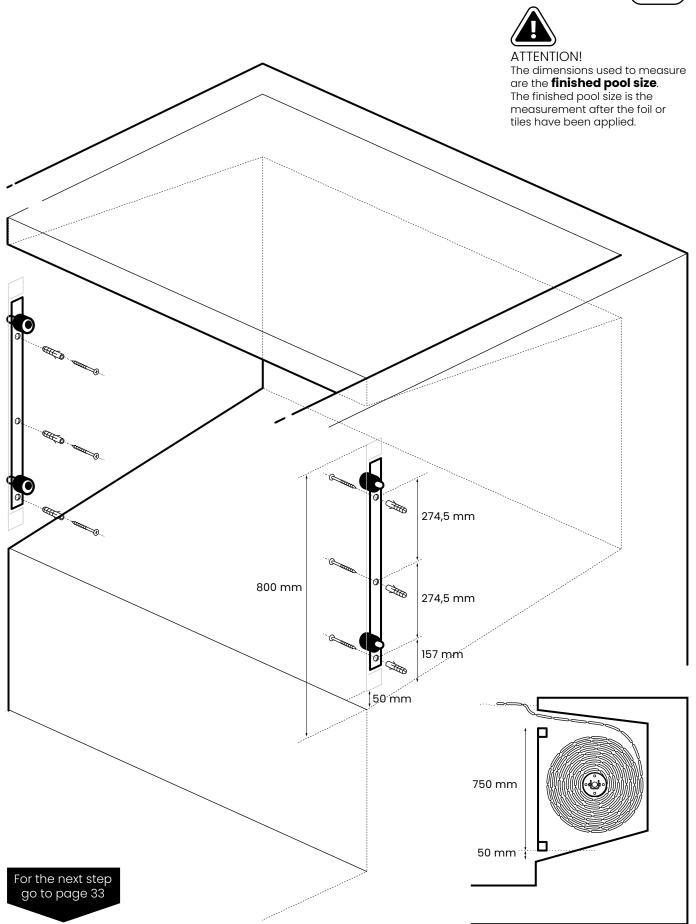

PRE-ASSEMBLY VERTICAL CAVE PANEL 1000 MM




EN

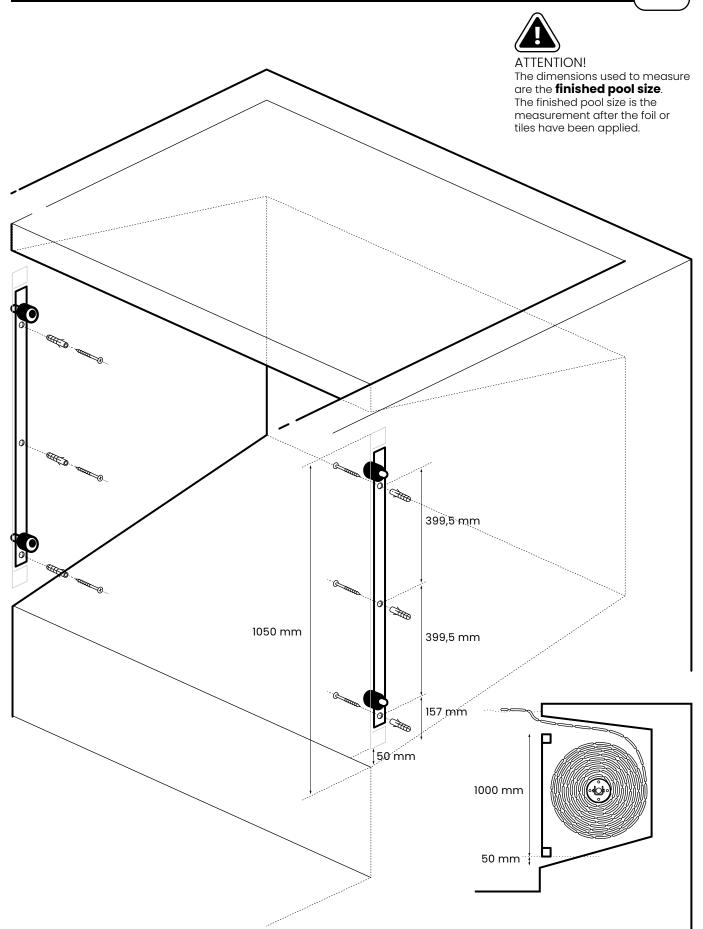



#### INSPIRED BY PROFESSIONALS

### ASSEMBLY VERTICAL CAVE PANEL 750/1000 MM



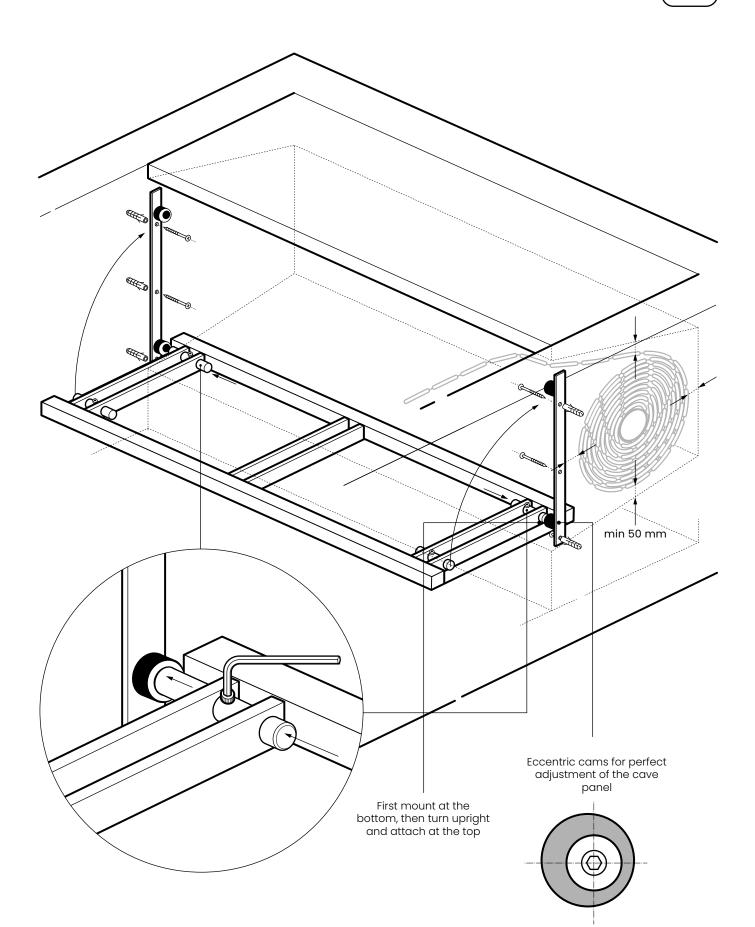

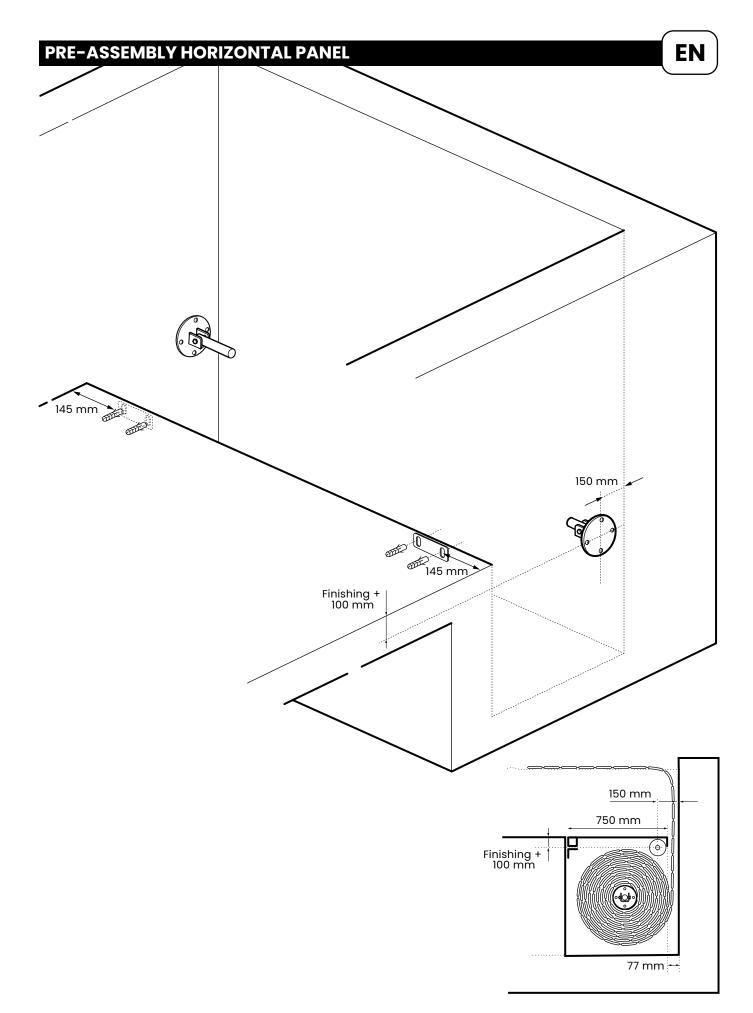

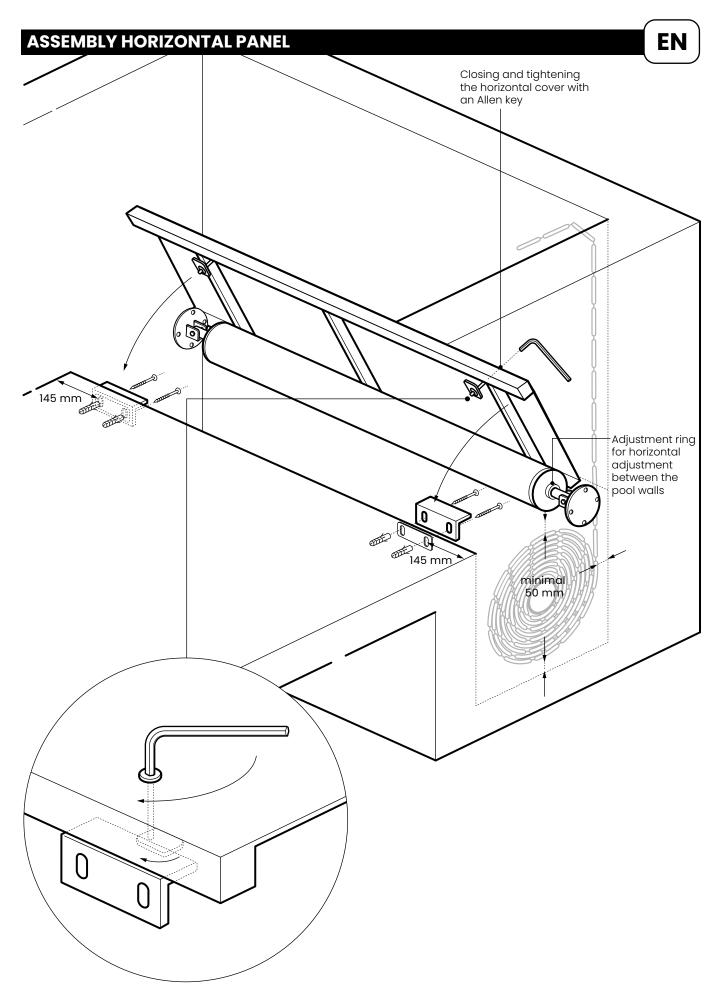



Korenmijt 1 5741PP, Beek en Donk Netherlands +31 (0)85 076 88 85 info@poolmotive.com www.poolmotive.com